
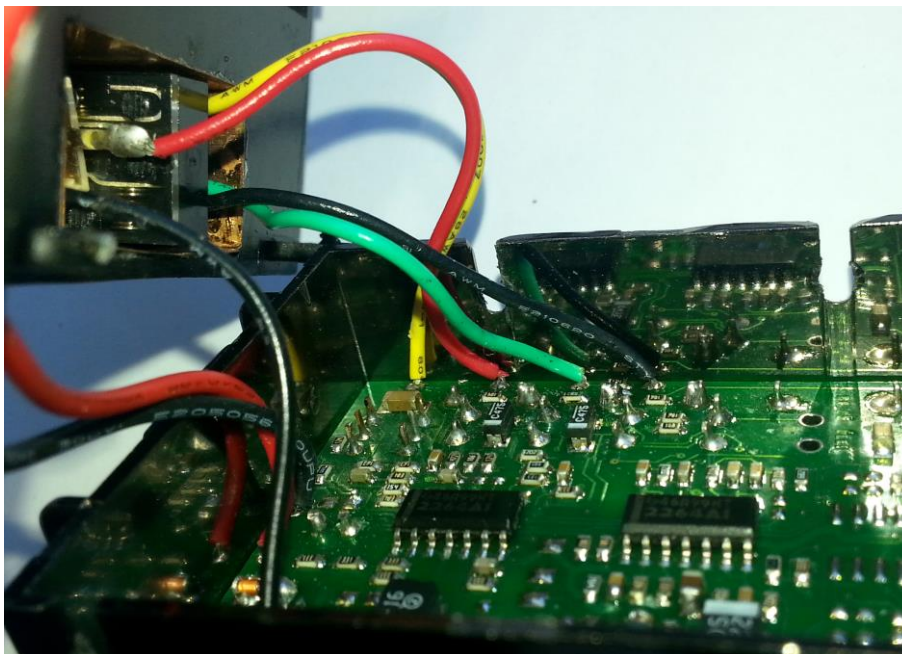


SH Four Plus Wiring

9V Battery
Red: +
Black -

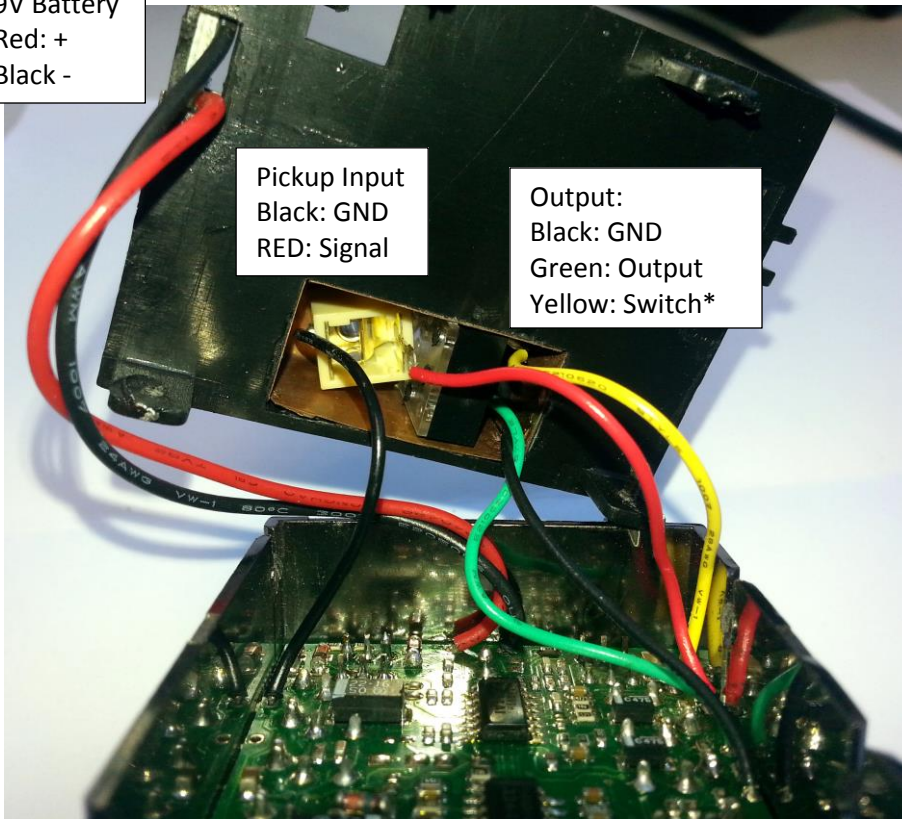

*Insert a mono cable!

The unit is switching on when the RNG (Yellow) contact on the output socket (= endpin socket) is set to GND.