


Installation Instruction for Shadow SH 007 Endpin

Content:

Endpin 1/4" to mini plug

1. Remove original endpin and drill a 7/16" (11mm) hole using the original hole as a pilot.
2. Slightly bevel the edges of the hole to avoid cracking the finish.
3. Press the endpin into the hole until it is flush with the body.
4. Pull the pickup output wire through the sound hole. Be careful not to pull the wire to hard and damage the pickup!
5. Unscrew the collar from the mini plug and slide it on to the pickup wire (see fig. 1).
6. Solder the center wire to the tip terminal of the mini plug and the shield to the sleeve terminal (see fig. 1).
7. Reinstall the collar on to the mini plug.
8. Reach in through the sound hole and plug the mini plug into the input socket on the endpin jack.

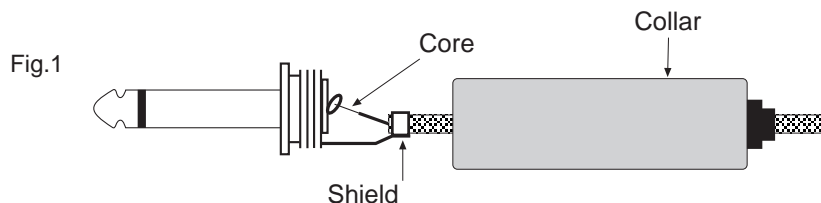

Note:

Piezo pickups and transducers have a very high output impedance. In order to get the optimum sound output we recommend an amplifier with low impedance input.