
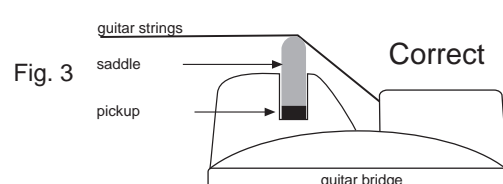
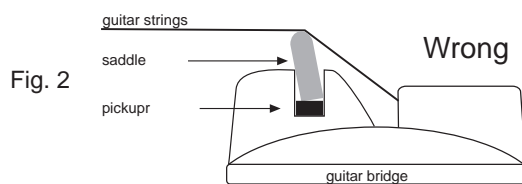


Installation Instruction for Shadow SH 097 Undersaddle Pickup

Content:

Undersaddle Pickup

1. Remove strings and original bridge saddle.
2. Center the pickup in the bridge slot with the output wire on the bass side.
3. Mark the position of the output wire and drill a 3/32" (2.3mm) hole.
4. Clean bridge slot completely and remove wood dust from inside instrument.
5. Feed the wire through the hole, place the pickup and make electrical connections as needed.
6. Remove 1/16" (1.8mm) of material from the bottom of the saddle making sure it is perfectly straight and flat (see fig. 1).
7. Reinstall the strings and retune the guitar. Make sure, the strings do not pull the pickup saddle forward in the slot (see fig. 2 and 3).

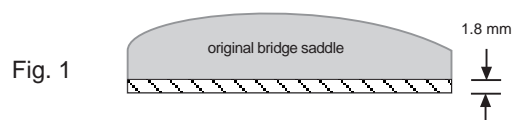

Note:

Piezo pickups and transducers have a very high output impedance. In order to get the optimum sound output we recommend an amplifier with low impedance input.