
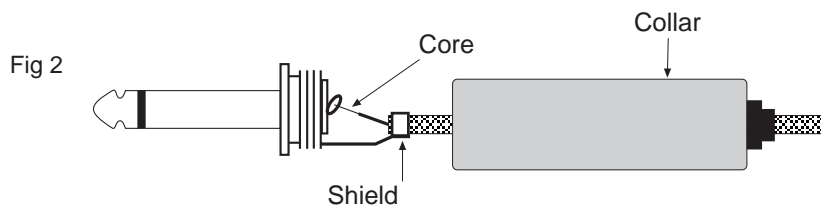


Installation Instruction for Shadow SH 1110 Undersaddle Piezo Pickup with Endpin

Content:

Endpin with 6.3mm output jack and 3.5mm input jack
piezo undersaddle pickup; fits 2.3mm standard slot
3,5mm mini-plug

1. Loosen strings and remove original bridge saddle.
2. Place piezo pickup with the output cable towards the lower E-string (E6) and mark, where to drill the 3mm hole.
3. Remove original endpin and increase hole up to 13 mm diameter
4. Slightly bevel the edges of the hole to avoid cracking the finish.
5. Clean up the saddle slot and eliminate the wood dust from the inside of the instrument.
6. To accommodate the height of the pickup reduce the height of the saddle (see fig. 2). Be sure that the bottom of the saddle is absolutely flat
7. Press the endpin into the hole until it is flush with the body. .
8. Put pickup cable through the hole of the bridge and place pickup into the slot. Do not pull the cable too strong, otherwise you will hurt the pickup.
9. Screw off the cover of the mini-plug and put it with the bending-protection first over the pickup cable.
10. Solder the middle cable (core) onto the connection of the mini-plug and the shieldn cable onto the shield (see Fig. 2)

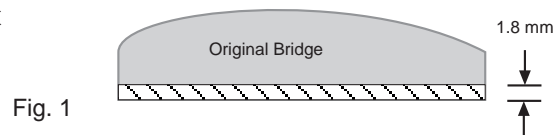

10. Screw the cover back on the mini-plug.
11. Plug the mini-plug into the mini-plug-input of the endpin.
12. Reinstall the strings and tune your guitar. Make sure the strings do not pull the pickup saddle forward to the slot (see Fig. 3 and 4).

